

Intelligent Plant Safety

iPS

Intelligent Motion Control Height & Slew Limiter

Inc. Virtual Wall

iPS supports a nationwide network of fully trained service engineers. Warranty claims, service work, technical information and spare parts are available.

Intelligent Plant Safety Ltd

t. +44 (0)1305 230318

e. sales@intelligentplantsafety.com

iMC Intelligent Motion Control

Height & Slew Limiter Inc. Virtual Wall

www.intelligentplantsafety.com/imc-height-and-slew-limiter



BRAND NEW “Voice Active” warning system reducing in-cab sounders and operator fatigue



Features & Functionality

BRAND NEW “Voice Active” warning system reducing In-Cab sounders reducing operator fatigue

Proportional Valves for the motion cut with manual override as **‘standard’**

Non OEM Specific, can be installed onto any manufactures piece of plant

Easy to use and intuitive MMi with a clear 4.3” colour In-Cab Display

Full smart Slew Limiting adjustable via the In-Cab Display

Smart Limiting with Gyro compensated Angle Sensors

3D Limitation anywhere within the working envelope

Optional ‘Limits Active’ output for Magenta Beacon

Optional Minimum Reach Control aiding cab protection

Optional Maximum Reach Control & Cab protection

Supervisor Key Switch as **‘standard’**

Optional Blade Monitoring & Control

Optional Corridor setup & Limitations

Data Logging as **‘standard’**

Optional Dig Depth Control

Optional Virtual Walls




t. +44 (0)1305 230318 | e. sales@intelligentplantsafety.com | w. www.intelligentplantsafety.com

iMC Intelligent Motion Control

Height & Slew Limiter Inc. Virtual Wall

www.intelligentplantsafety.com/imc-height-and-slew-limiter

Envelope limit selection

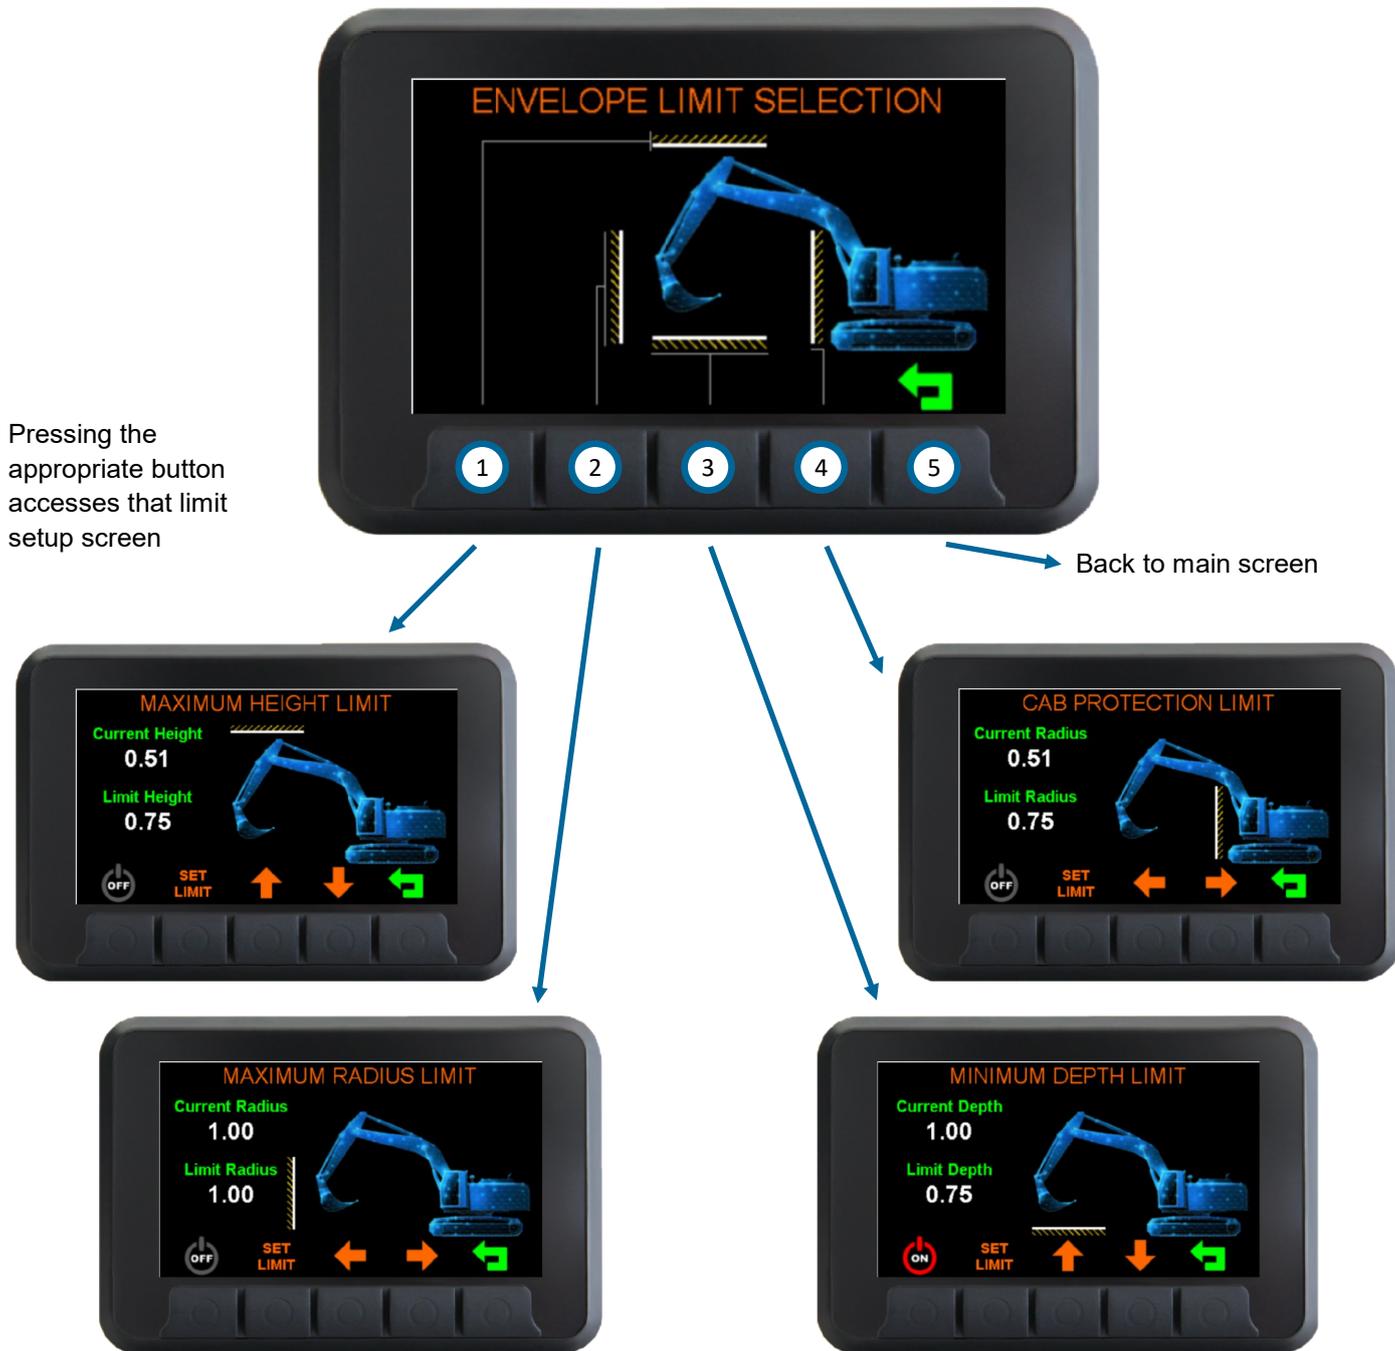

- Button 1 Turns the limit ON or OFF. If turned on here the system uses last saved Limit
- Button 2 Sets the limit at its current measured position. Move the equipment to the required limit. Pressing this button automatically turns the limit ON and the ON/OFF icon 'button 1' will turn red/ON.
- Button 3 & 4 Adjusts the limit to be set. Pressing either of these buttons will automatically activate the limit. This limit can then be manually turn OFF at any time.
- Button 5 Exit back to main screen




t. +44 (0)1305 230318 | e. sales@intelligentplantsafety.com | w. www.intelligentplantsafety.com

iMC Intelligent Motion Control

Height & Slew Limiter Inc. Virtual Wall

www.intelligentplantsafety.com/imc-height-and-slew-limiter

Slew Type selection

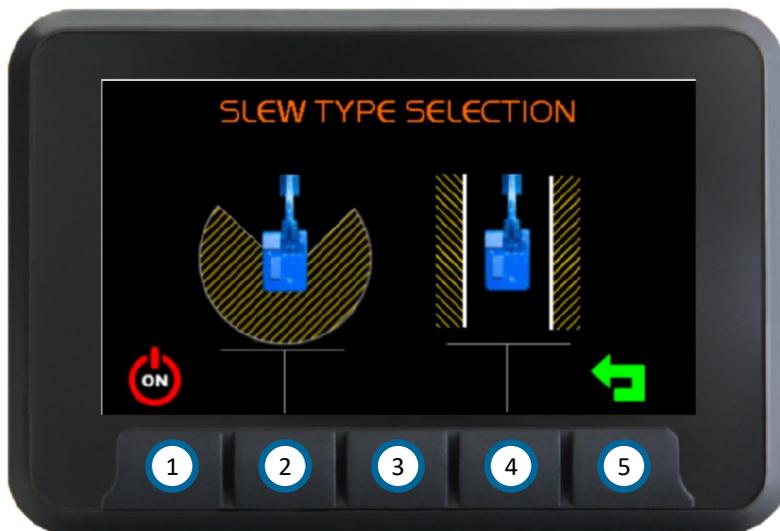

Turns the Slew Limit ON or OFF. If turned ON here it uses the last saved Limits

←

Angular Slew



Virtual Walls

→ Back to main screen

Follow the clear and easy to understand instructions to set Angular Slew Limits.

Each wall can be individually set by adjusting the distance using the directional arrows. A virtual corridor is set by turning both walls ON.

Wall Limits are parallel to the machine tracks at 0°



t. +44 (0)1305 230318 | e. sales@intelligentplantsafety.com | w. www.intelligentplantsafety.com

iMC Intelligent Motion Control

Height & Slew Limiter Inc. Virtual Wall

www.intelligentplantsafety.com/imc-height-and-slew-limiter

Limit Icons

Maximum Height limit set



Maximum radius limit set



Minimum radius limit set



Dig Depth limit set



All envelope limits set



Envelope Limits

When in approach zone and then limit, the limit bar changes colour and the arrows show what direction the slow down is. Icons and arrows work this way for all directions.

Angular Slew Limit set



Virtual Wall Limit set



Slew Limits

When in approach zone a message appears and the corresponding arrow turns yellow.

These change to a red "limit reached" message and the arrow turns red when the limit has been reached.

Virtual wall icons show the limit distance in metres from slew centre.

Left or Right Virtual wall limit



iMC Intelligent Motion Control

Height & Slew Limiter Inc. Virtual Wall


www.intelligentplantsafety.com/imc-height-and-slew-limiter

iMC Major Components

Smart Height Limiting with Gyro compensated Angle Sensors



4.3" Intuitive In-cab MMI with intelligent and easy to understand graphics reducing operator fatigue

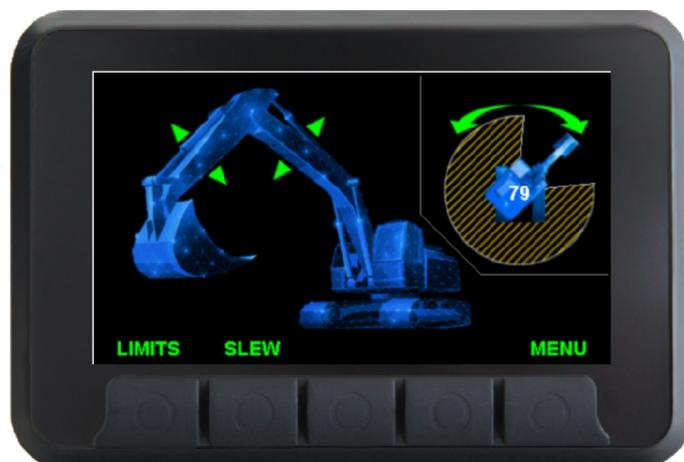


Built in Supervisor Key Switch to remove cab clutter



Integrated I/O Module



Manual Override tool held with the Supervisor key

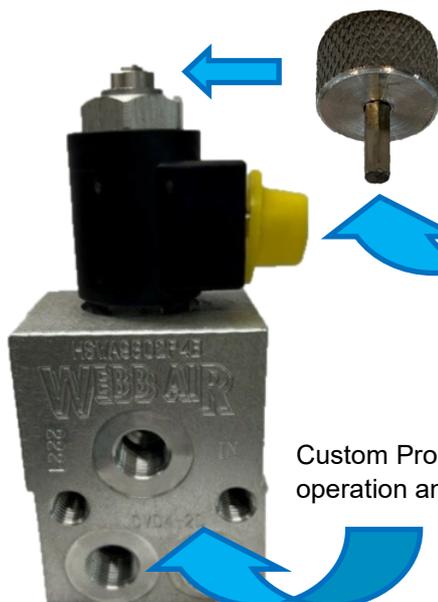

Custom Proportional Control for smooth machine operation and to reduce operator fatigue



t. +44 (0)1305 230318 | e. sales@intelligentplantsafety.com | w. www.intelligentplantsafety.com